WALL MOUNTING INSTRUCTIONS

HARMONY RAILING™

4X BASE PLATE
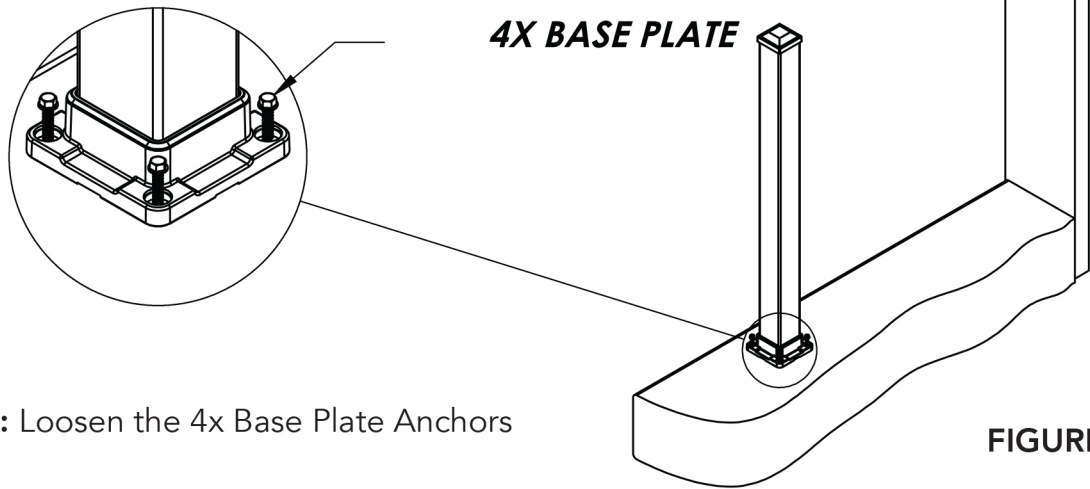
FIGURE 1

STEP ONE: Loosen the 4x Base Plate Anchors (Figure 1).

TEK SCREWS

STRAIGHT CLIP

FIGURE 2

TOP RAIL

PANEL

TEK SCREWS

STRAIGHT CLIP

FIGURE 3

FIGURE 4
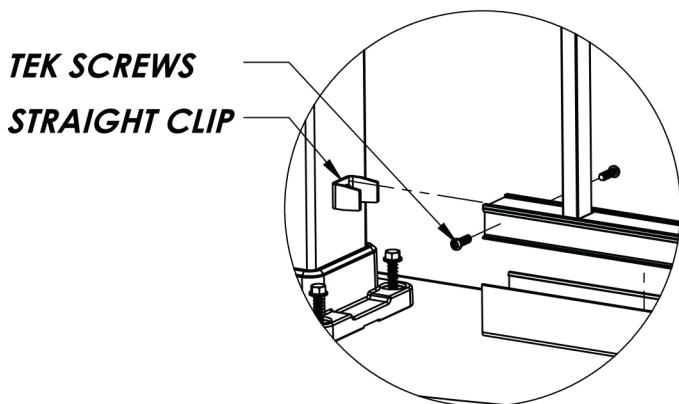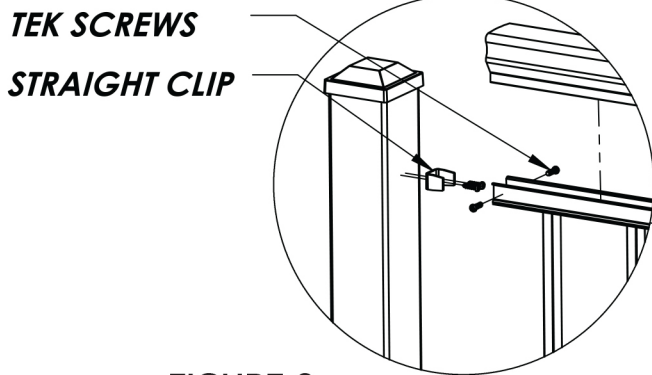
BOTTOM SNAP

STEP TWO: Attach panel to post with standard method using straight clips and tek screws (Figure 2&3).
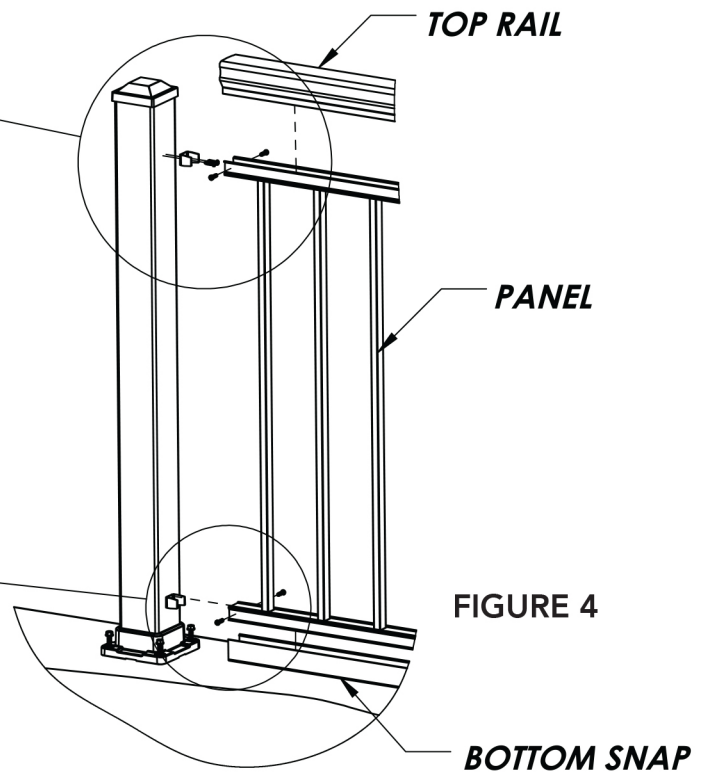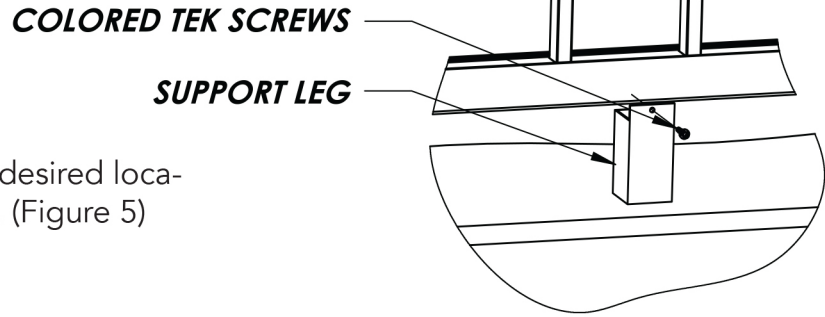
STEP THREE: Attach top rail and bottom snap to panel (Figure 4).

FIGURE 5

COLORED TEK SCREWS

SUPPORT LEG

STEP FOUR: Attach support leg in desired location using provided color tek screw. (Figure 5)

STEP FIVE: Tilt post back to slide top rail wall mount and bottom rail wall mount onto panel. (Figure 6)

STEP SIX: Attach wall mounts to mounting surface using wall anchors. (Figure 6) (SEE TABLE BELOW FOR SUGGESTIONS)
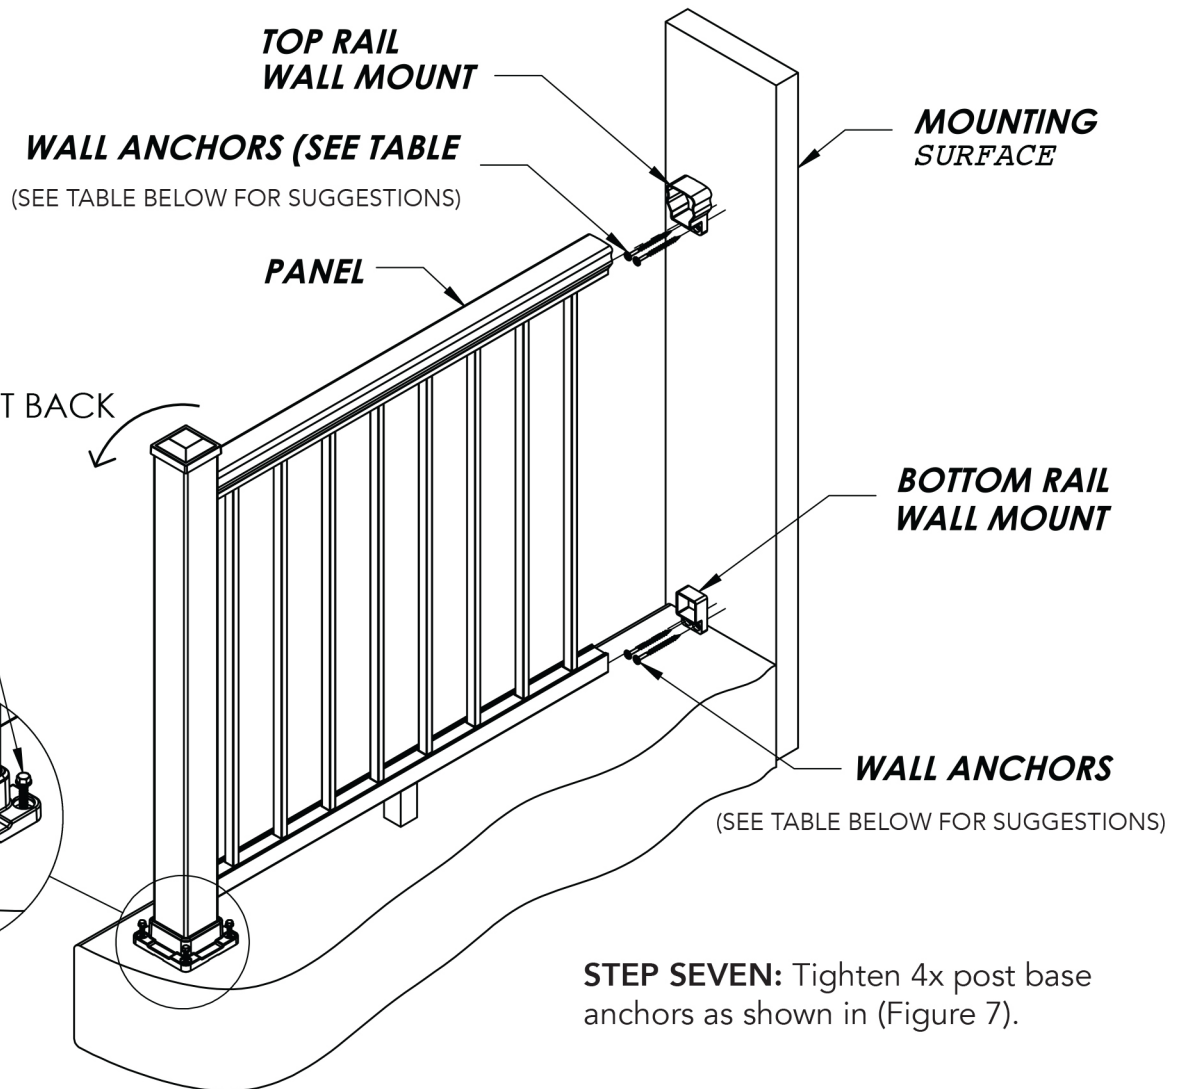
FIGURE 6

TOP RAIL WALL MOUNT

WALL ANCHORS (SEE TABLE

(SEE TABLE BELOW FOR SUGGESTIONS)

PANEL

MOUNTING SURFACE

TILT POST BACK

BOTTOM RAIL WALL MOUNT

4X BASE PLATE ANCHORS

WALL ANCHORS

(SEE TABLE BELOW FOR SUGGESTIONS)

FIGURE 7

STEP SEVEN: Tighten 4x post base anchors as shown in (Figure 7).

WALL MOUNT ANCHOR SUGGESTIONS		
SUBSTRATE	DESCRIPTION	SKU
CONCRETE/BLOCK/BRICK	5/16" X 3" TAPCON CONCRETE ANCHOR	2327303
WOOD	5/16" X 4" GRK RSS EXTERIOR SCREW	2300231